

066 Camp Ladder End Bunk



Assembly and Parts Good for 30, 36, 39 Sizes

Each Bed Consists of:

- 2 Bottom Bed Ends: 2 Pre-Drilled Holes on each side and one Pre-Drilled hole at the top of each side.
- 2 Top Bed Ends: 2 Pre-drilled Holes on each side and one Pre-Drilled hole at the bottom of each side and a groove carved from the top of each side.
- 8 Bed Slats
- 4 Bed Rails
- 2 Safety Rails

Hardware:

- 16 Headlock Spider Head Fasteners 4 1/2"
- 24 Square Head Fasteners 1 1/4"
- 4 Metal Connector Pins
- 1 Headlock Spider Drive Bit

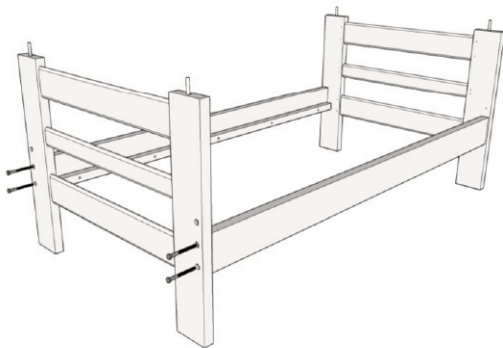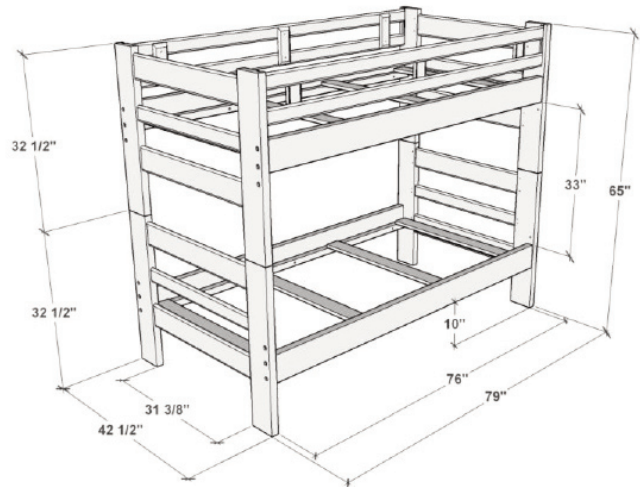


Assembly:

1. Connect Bottom End Panels with 2 Bed Rails using 8 Headlock Spider Head Fasteners with a cordless drill and the Spider Drive Bit. DO NOT over tighten.

2. Insert the 4 Metal Connector Pins in the pre-drilled holes at the top of each Bed End Panel.

3. On the floor, connect Top Bed End Panels with 2 Bed Rails using 8 Headlock Spider Head Fasteners with a cordless drill and the Spider Drive Bit. DO NOT over tighten.


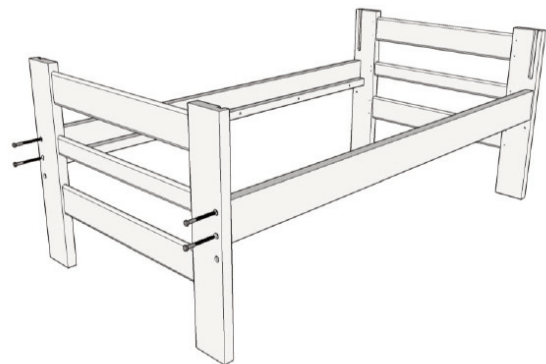


066 Camp Ladder End Bunk

Assembly and Parts Good for 30, 36, 39 Sizes

4. Slide the Safety Rails into the grooves carved into the Top Bed End Panels with the pocket holes facing inward.

5. Secure the Safety Rails to the Top Bed Ends Panels with the 8 Square Head Fasteners. DO NOT over tighten.

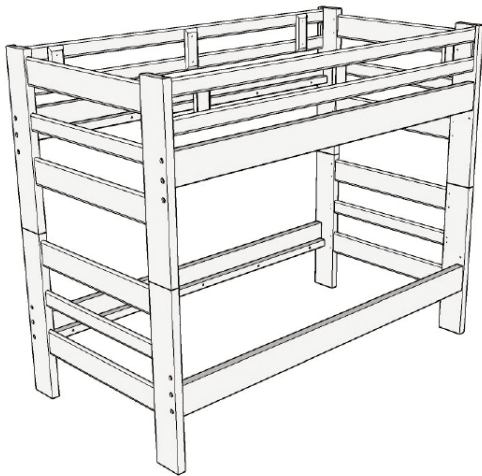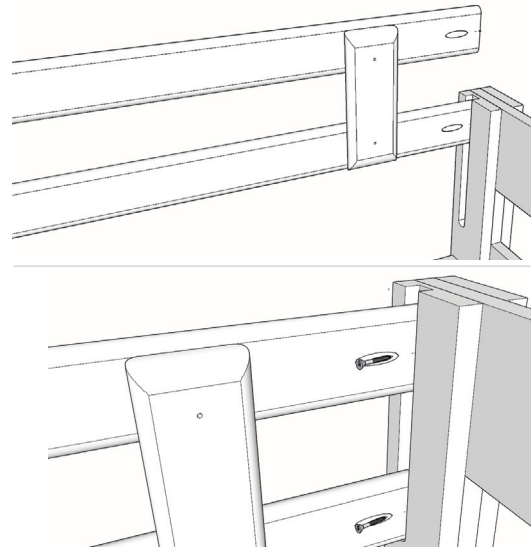

6. Using two people, raise the top bunk section and place on top of bottom bunk section; making sure that the metal pins insert fully into the Top Bed End Panels.

7. Place 4 slats perpendicular to Bed Rails and secure with 1 1/4" Square head screws. These serve as the support for the foundation and mattress.

